



Parts List


Full Assembly

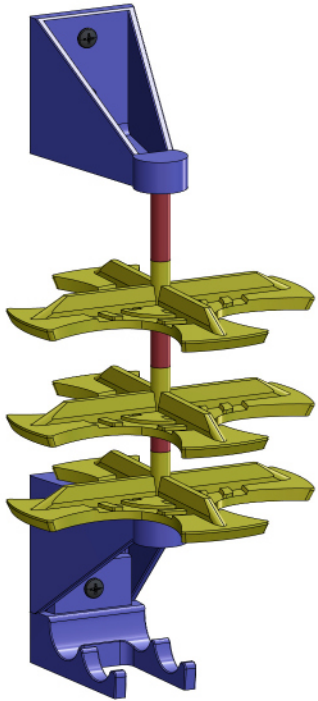


Top Bracket
(Built-in Tray)

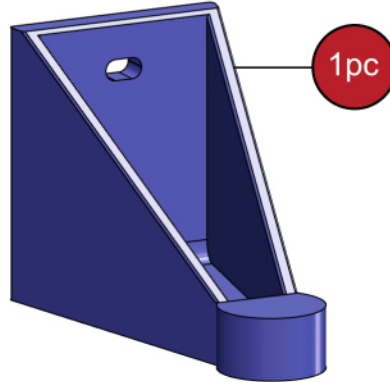

Bottom Bracket

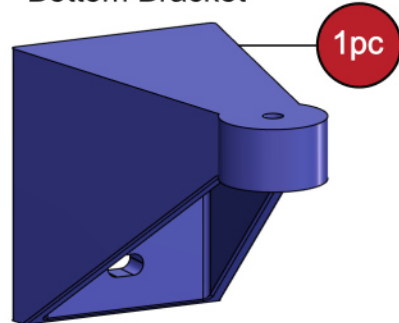


Optional:
Alan Wrench Hanger

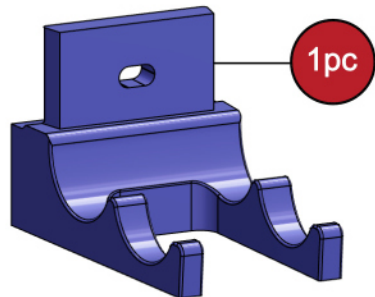


Wood Screws



Carousel with Magnets
(Jaw Shelf)

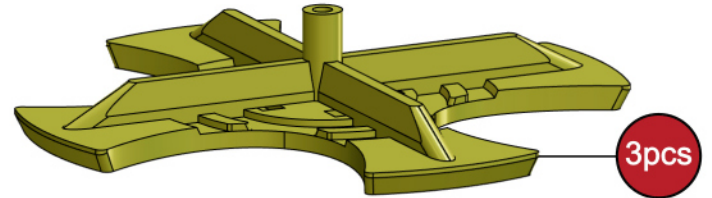

Brass Rod

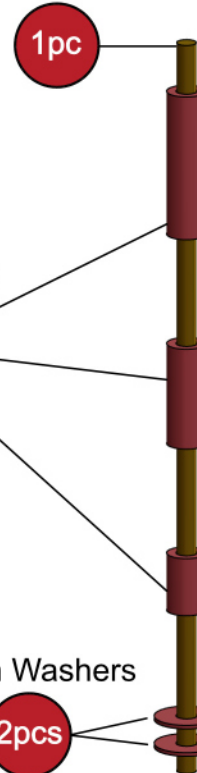

Multi Sized
Spacers (set 1)

3pcs

Same Sized
Spacers (set 2)





3pcs

Nylon Washers

2pcs

Steps 1-3

Installation Instructions

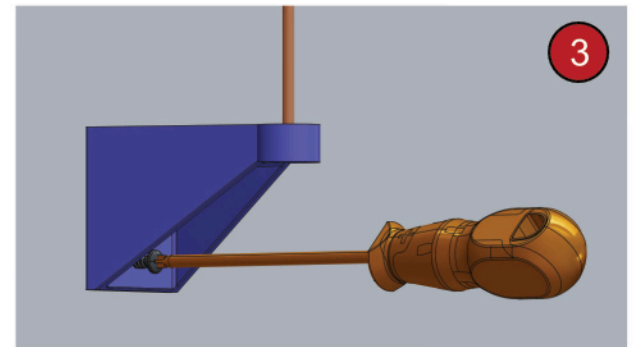
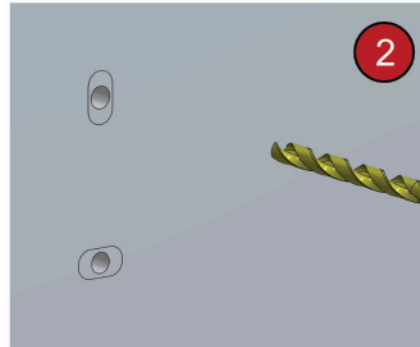
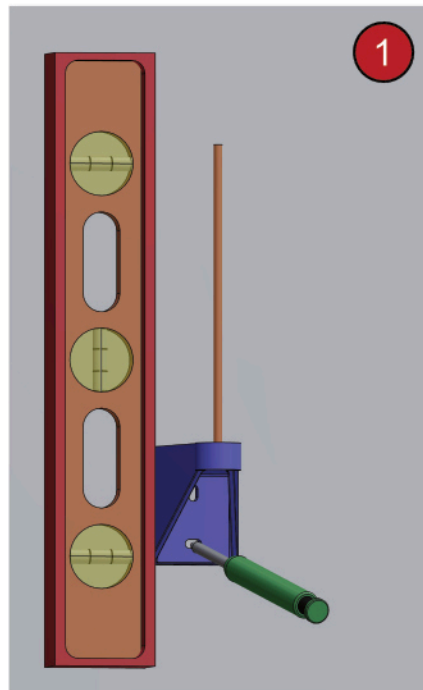
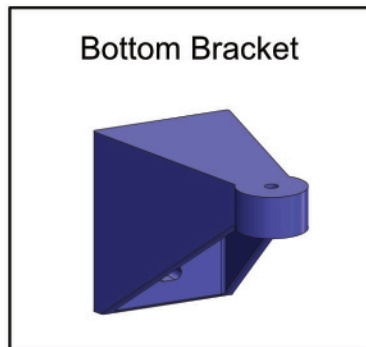


Note: Make sure to secure screws into a stud, plywood, or proper drywall anchors.

- 1) Hold bottom bracket next to a level to mark the 2 holes to be drilled.
- 2) Drill a 1/8" hole in the center of the marked holes.
- 3) Use the black wood screws that are supplied and tighten them down so it is just snug enough so you can shift it around for minor adjustments. Make sure to retighten after completing the assembly.

Steps 4-6




Installation Instructions

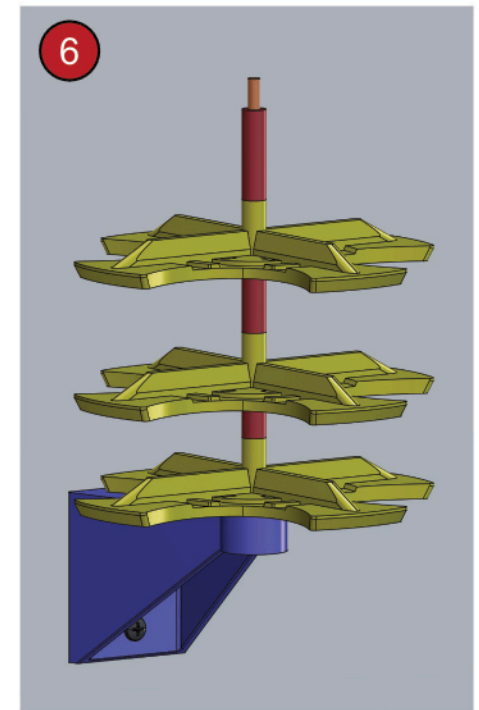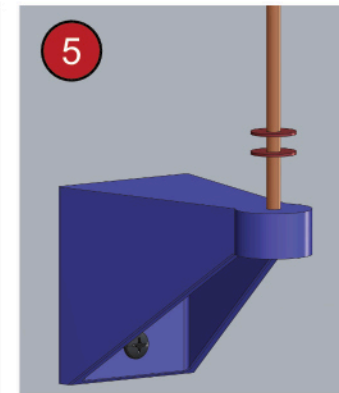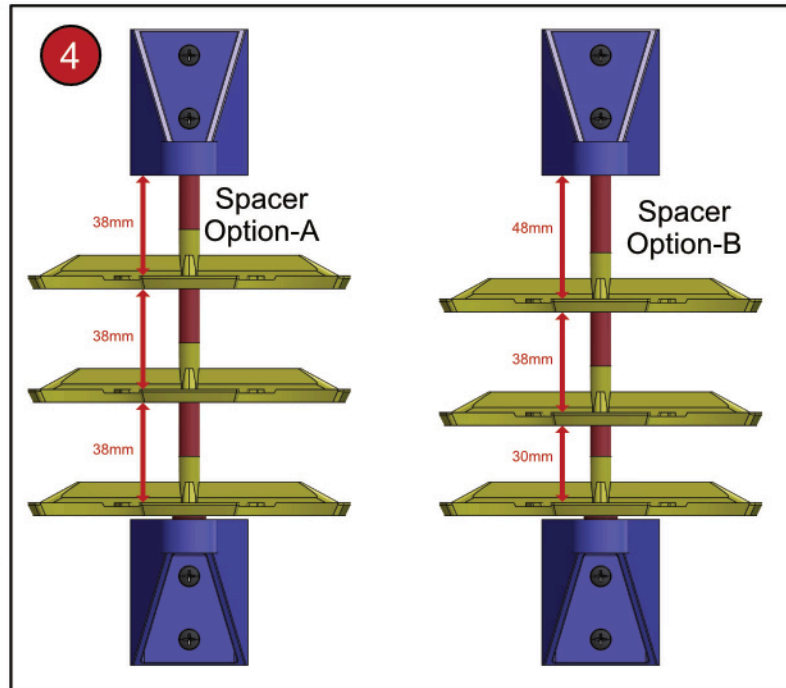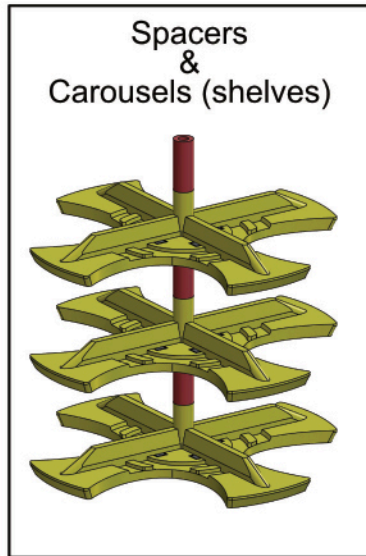

- 4) Choose which set of spacers you want to use. For long nose jaws choose the spacer Option-B.
- 5) Install the 2 thin nylon washers before the first carousel.
- 6) Install the Carousel then 3D printed Spacer and repeat. The brass rod should protrude slightly for the top bracket to attach to.

Steps 7-11

Installation Instructions

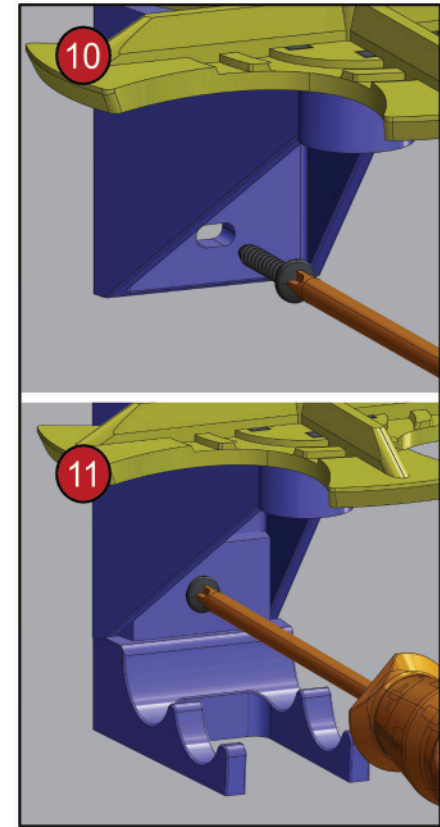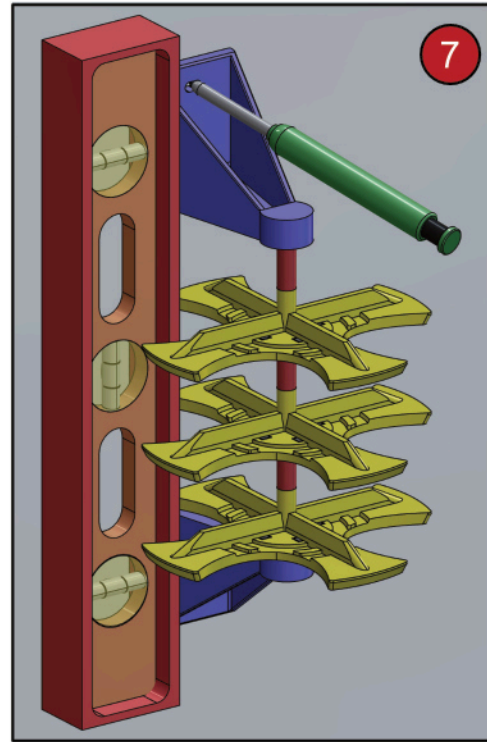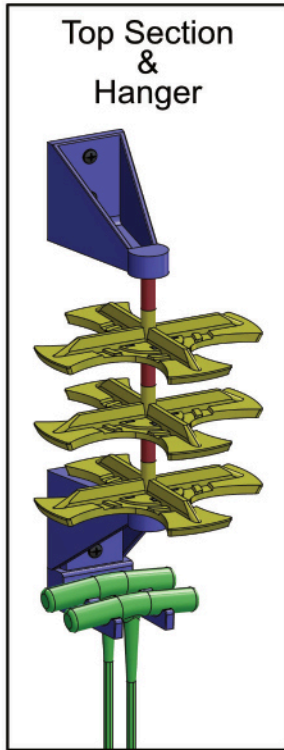

- 7) Slide the top bracket over the brass rod and use a level to make sure it is straight before marking the holes.
- 8) Use 1/8" drill bit and drill in center of the slot.
- 9) Attach the supplied screws while holding the level in place.
NOTE: Once everything is level make sure that you tighten the lower screws as well.
If you purchased the Alan Wrench Hanger then follow steps 10 & 11
- 10/11) Remove the bottom screw and slide the hanger in place and reattach the screw.